

CCTV Camera Tester for IP Digital / HD Coax / Analogue Systems



CCTV Camera Tester for IP Digital / HD Coax / Analogue Systems


SecuriTEST IP is an installation and troubleshooting tester for digital/IP, HD coax and analogue CCTV camera systems. With a single tester that can power, configure and document, SecuriTEST IP increases productivity from start to finish.

Supply power to cameras via PoE/PoE+ (Power over Ethernet) or standard 12V DC power using its internal Li-Ion battery, eliminating the need for external power adapters and injectors.

The QuicklP $^{\text{\tiny TM}}$ feature allows installers who are new to IP camera systems to quickly and easily connect to cameras without being network experts.

Create professional test reports including video screen shots to verify the job has been completed successfully and reduce unpaid call backs.

Camera Configuration, Installation and Troubleshooting

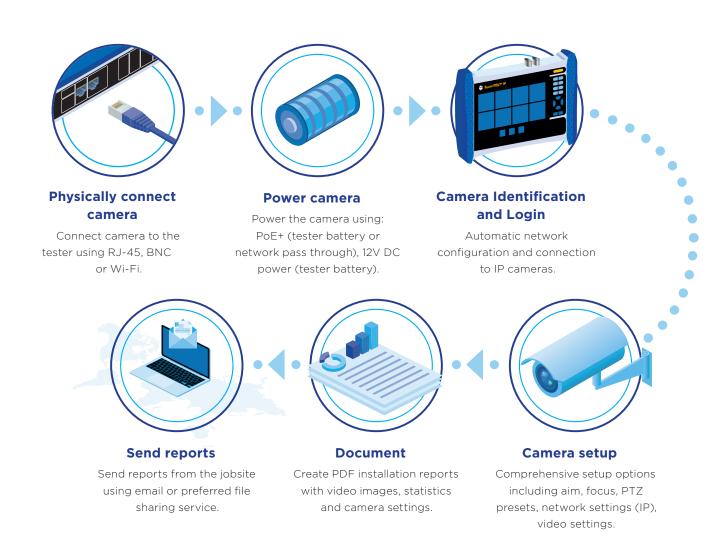

Physically Connect Camera

Connect to any IP or analog camera using RJ-45, BNC connections or Wi-Fi via network.





Power Camera

Whether you are installing or troubleshooting cameras, SecuriTEST IP supports all your power requirements for IP and analogue cameras.

No need for separate power injectors - SecuriTEST IP includes the following power outputs:



Power the camera using Power over Ethernet (PoE+), up to 24 watts from the tester - RJ-45 port.





Power the camera using 12V DC from the tester - 2.5mm to 3.5mm barrel connector.

Power the camera by passing PoE+ from the network and through the tester - RJ-45 port.

Depend On Us

Camera Identification and Login

QuickIP™ automates the process of connecting to IP cameras, allowing novice technicians to configure IP cameras as easily as analogue cameras. For instances where dynamic IP addresses are required by the camera, SecuriTEST IP has a built-in DHCP server making setup easy and eliminating the need for additional network hardware.

A suite of networking troubleshooting tools are available to pinpoint and solve network connectivity issues.

- Display Network Configuration
- Ping / TraceRoute
- Hub blink for Port Identification
- IP network Scan check for IP address conflicts

Poe 48V 0N/3.3W Local IP: 192.168.0.245 ✓ Use Temp IP PING Start PING ONVIF Camera Web Browser NON ONVIF CAMERA Refresh

IP Camera Setup

SecuriTEST IP offers a comprehensive range of ONVIF and non-ONVIF camera setup tools to ensure the camera is installed correctly



- **1. Configure camera** update camera information and network settings.
- **2. Aim and focus** use the high-resolution touchscreen or the hard keys when wearing gloves.
- **3. Program presets for PTZ cameras** Program PTZ camera presets for users to automatically look at predefined areas.

- Convolution of the convolution o
- **4. Take snapshot** save video snapshots including preset locations for your installation reports.
- **5. Record video clip** record video clips to demonstrate complete coverage for PTZ cameras.

Analogue and HD Camera Setup


Easily setup analogue cameras.



Video adjustment



PTZ protocol settings

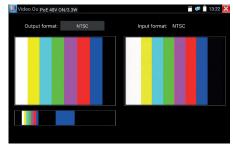

Test pattern generator to adjust screens

Professional Reports*

Easily transfer reports from the jobsite – Using the built-in Wi-Fi and the web browser, test reports can be sent directly from the tester using email, your preferred file sharing service or be exported on microSD card.

Convert unpaid call backs to billable service calls - Generate professional PDF reports that provide proof of installation to the client.

No more spreadsheets - Today security engineers waste time manually filling in excel documents to create reports. SecuriTEST IP is the first camera tester to capture camera image(s), network configuration and automate documentation.

Reduce troubleshooting time - Reports capture as-built configuration that will help to reduce troubleshooting on future call backs.

18GB of combined storage -

10GB of internal memory and 8GB available on the SD memory card included.

* Only applicable when using the ONVIF protocol

Example Report



Data Cable Test (UTP) - Wiremap

Eliminate guess work troubleshooting cabling faults - SecuriTEST IP is used in combination with the "Cable Trace/Remote Tool" to pinpoint cabling faults such as cross overs, miswires, shorts and opens. The length of the cabling is also provided.

Determine water ingress in data cabling - Many cables are run outside or in underground conduit and exposed to moisture. Moisture ingress through the cable jacket, which is impossible to see, leads to a number of performance problems.



Cable Tracing - Search for Cabling

SecuriTEST IP includes the ability to identify and trace cables using the digital tone generator and the "Cable Tracer/Remote Tool". Choose from four tones and use the "Cable Tracer/Remote Tool" with variable sensitivity settings to trace either large cable bundles from a distance or pinpoint a single cable within a bundle.

Depend On Us 6 5 6



PoE+ troubleshooting

- Display the PoE+ consumption of the attached camera in realtime using the power monitor tool. Displays voltage by pair and total wattage drawn.

Analogue/AHD/CVI/ TVI video input -

Connect to all common analogue and HD-over-coax cameras for maximum versatility.

Setup security monitors - Use the analogue Video Out port on the tester with the test pattern generator function to setup security monitors.



12V DC power supply

Flashlight - Bright LED

flashlight with 5/10/30/60

minute auto-off options.

- Power any camera using the built-in 12V/2A DC power supply. Power up camera with PoE+ - RJ-45 network port provides PoE+ (up to 24 watts) to the camera using the internal battery when network power is unavailable.

Troubleshooting

HDMI - Use the HDMI In port, connect to any HDMI source to isolate Network Video Recorder (NVR) vs monitor problems.

HDMI In - Eliminates the need for a separate monitor.

RS485 input/out -

Control and program Pan/ Tilt/Zoom (PTZ) cameras and monitor incoming PTZ control signals to assist in troubleshooting analogue cameras.

Camera audio testing using audio in port -

Test microphone equipped cameras using the tester's internal speaker.

Camera audio testing using audio out port - Listen

to the camera audio through the tester using external headphones/ earbuds. Useful in noisy environments.

Data cable testing

- RJ-45 port to perform wiremap testing of unshielded twisted pair (UTP) data cabling. Automatically identify cross over cables and common wiremap faults using the Tracer/Remote.



USB charging - High power 2A USB port to quickly charge devices such as mobile phones and tablets. (Please note this port does not support data transfer).

microSD slot - Transfer test reports, screen captures and video clips, or update software using microSD card. **HDMI output** - Display tester screen on a larger monitor using HDMI for greater clarity.

Depend On Us 0 7

CCTV Camera Tester for IP Digital / HD Coax / Analogue Systems



Ordering Information

Part No.	Kit Contents
R171000	SecuriTEST IP - Digital/Analogue/HD Coax CCTV Tester. 1 x SecuriTEST IP Camera Tester, 1 x carry case with strap, 2 x neck straps, 1 x PSU EU/UK/US/AU adapters, 1 x cable tracer/ remote, 1 x 3m Cat. 5e UTP patch cable, 1 x 3m coax cable with two end BNC (m) connectors, 1 x 3m DC12V 3.5(f) to 2.5(f) power cable, 2 x RS485 female green plugs, 1 x 0.5m RS485 cable with female green plug and two clips, 1 x 0.5m audio male jack with other end two clips, 1 x quick reference guide, 1 x 8GB microSD card and reader with USB adapter

Optional Accessories

Part No.	Description
R171050	1 x Replacement Cable Tracer/Remote
R171051	$1\mathrm{x}$ Replacement accessory set for SecuriTEST IP. $1\mathrm{x}$ coax cable with two end BNC (m) connectors, $1\mathrm{x}$ DC12V $3.5(\mathrm{f})$ to $2.5(\mathrm{f})$ power cable, $2\mathrm{x}$ RS485 female green plug
R171052	1 x Replacement Battery

For replacement accessories, please visit our website.

Basic Specifications

Internal	Max. Cable	Battery	Dimension	Weight	Operation	Operation
Memory	Length	Life*	(mm)		Temp	Humidity
10GB	100m	10 hours	160 (L) x 252 (W) x 48 (D)	1.00Kg	-10°C to +50°C	30% to 90%

For detailed specifications, please visit our website. *Battery life is dependent on the load being drawn.





All Rights Reserved. TREND, TREND NETWORKS, SecuriTEST, and the QuickIP logos are trademarks or registered trademarks of TREND NETWORKS. TREND NETWORKS North America 300 Roundhill Drive, Suite 1, Rockaway, NJ 07866, USA Tel. 973-957-7700

contactus@trend-networks.com

www.trend-networks.com